



Acura Music Link

User's Guide

Contents

- Acura Music Link3**
- What's Included4**
- What You Need5**
- Using Acura Music Link Without Acura TTS6**
 - Connecting Your iPod6
 - Disconnecting Your iPod6
 - Identifying the Audio System Controls7
 - Using the Audio System Controls.....8
 - e Music9
 - Selecting a Play Mode9
- Using Acura Music Link With Acura TTS10**
 - Acura TTS10
 - Info Tags10
 - Before Installing Acura TTS11
 - Installing Acura TTS11
 - Uninstalling Acura TTS.....11
 - Running Acura TTS12
 - Text-to-Speech Settings13
 - Connecting Your iPod14
 - Disconnecting Your iPod14
 - Identifying the Audio System Controls15
 - Using the Audio System Controls16
 - Playing Music17
 - Selecting a Play Mode/Category17
- Tips20**
- Support22**

Getting Started Quickly

Designed specifically for Acura vehicles, Acura Music Link allows you to play music from your Apple® iPod® on your vehicle's audio system. Acura Music Link connects your iPod directly to your vehicle's audio system for the best sound-quality results. (It does not transmit music from your iPod on an FM radio frequency and use your vehicle's FM radio to play music.) Once connected, Acura Music Link allows you to use the audio system's controls to search for and play music from an iPod, and it charges your iPod battery.

To get started using Acura Music Link quickly, see the **Using Acura Music Link Without Acura TTS*** section of this guide or the Quick Reference Guide. Both will show you how to connect your iPod, play music (either shuffle songs or shuffle albums), and skip to the next song or album.



To get the most out of Acura Music Link, first install the Acura TTS software application provided on the Acura Music Link CD-ROM. (See **Using Acura Music Link With Acura TTS**.) Acura TTS is an optional software that installs on the Mac or PC you use with your iPod. It provides voice prompts to help you find music on your iPod, and it allows you to shuffle songs, shuffle albums, seek/skip to the next song or album, and search playlists, artists, albums, and genres. (To learn more about Acura TTS, see **page 10**.)

NOTE: Acura TTS is not required to operate Acura Music Link.

* Text-to-speech (TTS)

What's Included

Your Acura Music Link kit includes a dealer-installed Acura Music Link cable located in your vehicle's glove box, a Quick Reference Guide to get you started quickly, and an Acura Music Link CD-ROM (for use on a personal computer).

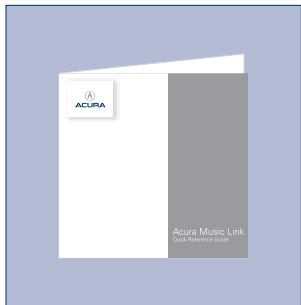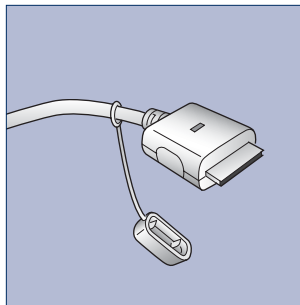

What You Need

► Table of Contents

- **iPod:** iPod (4th-generation or later), iPod mini®, iPod nano®, and iPod video®. It does not work with the iPod shuffle®. Make sure your iPod has been updated with the latest firmware from Apple.

Visit www.apple.com/ipod/download for more information.

NOTE: Use the USB 2.0 or FireWire cable that came with your iPod or iPod mini to ensure proper operation.

- **Mac:** OS 10.3.9 or 10.4.7


- OR -

PC: Windows XP (SP2) or Windows 2000 (SP4) with TTS engine


NOTE: Use iPods formatted for Mac only with Mac computers, and use iPods formatted for PC only with PCs.

- **iTunes®:** 6.0.4 or later. Visit www.apple.com/itunes/download for more information.


Installation Note: Acura MusicLink can be installed on *applicable* vehicles equipped with factory- and dealer-installed Acura audio systems and Acura CD players/changers. American Honda makes no guarantee that Acura MusicLink will operate or operate properly on vehicles equipped with non-Acura audio systems or non-Acura CD player/changers.

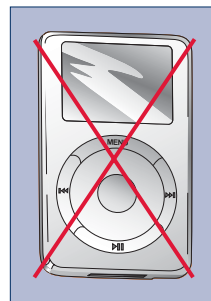

1st-generation iPod

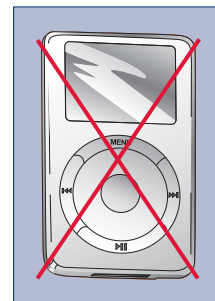

2nd-generation iPod

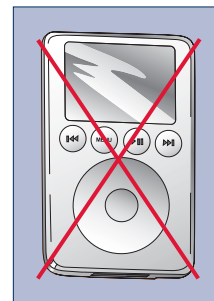

3rd-generation iPod



iPod video, iPod nano, 4th-generation iPod, and iPod mini


Using Acura Music Link Without Acura TTS

[▲ Table of Contents](#)

Connecting Your iPod

Make sure your iPod is in music mode (not photo mode). Then, find the Acura Music Link cable installed inside the glove box, and plug it into the dock connector port on the bottom of the iPod. When the Acura Music Link cable is properly connected:

- A large check mark appears on the iPod screen. (See below.)
- You cannot operate the iPod using its controls (click wheel, etc). It can only be operated using your vehicle's audio system controls.
- Your vehicle charges the iPod battery when the ignition switch is in the ON (II) or ACC (I) position. It does not charge the iPod when the ignition switch is in the OFF (0) position.

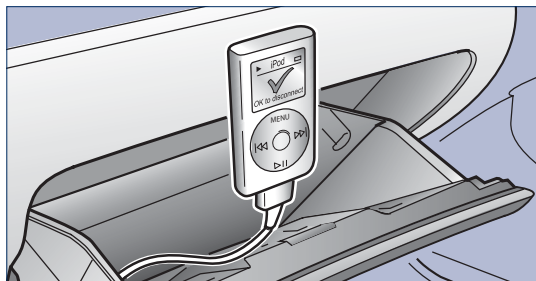

Disconnecting Your iPod

To disconnect the iPod, squeeze both sides of the Acura Music Link cable connector, and unplug the cable. You can connect and disconnect your iPod while the audio system is on or off.

IMPORTANT:


- For your safety, do not connect or disconnect the iPod while driving.
- Secure the iPod in the glove box. Do not place it on or allow it to fall onto the vehicle floor, where it can get stuck under the brake pedal or the accelerator pedal.
- Do not leave the iPod in the vehicle in high temperatures or expose it to extended periods of direct sunlight; doing so may damage it.
- To avoid damaging the Acura Music Link cable, do not pull strongly on the cable. Always keep the connector dry, and cap the connector when it is not in use.

Using Acura Music Link Without Acura TTS (Continued)


[▲ Table of Contents](#)

Identifying Audio System Controls


Once your iPod is connected to Acura Music Link, use the audio system buttons (shown in blue) to play music. Note that Acura factory-installed audio systems vary from model to model. Your Acura may have slightly different button names for the same Acura Music Link functions.

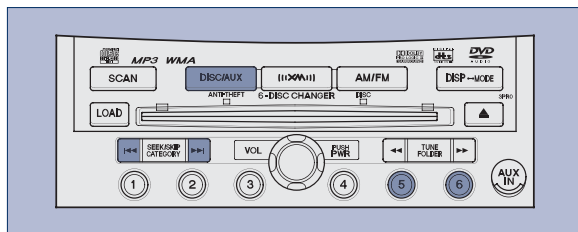


(RDX with Technology Package shown)

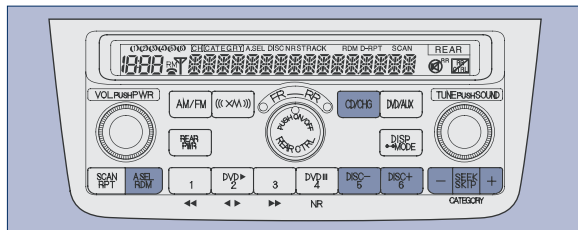

(MDX Touring with RES shown)

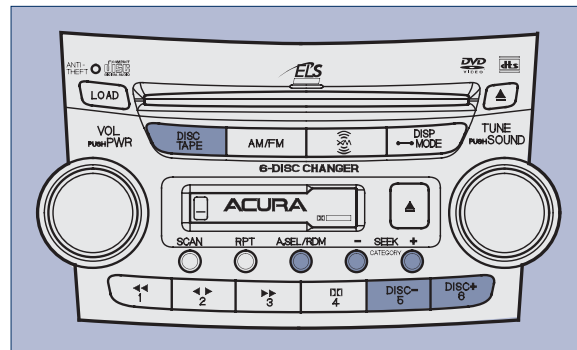

(TL with navigation system shown)

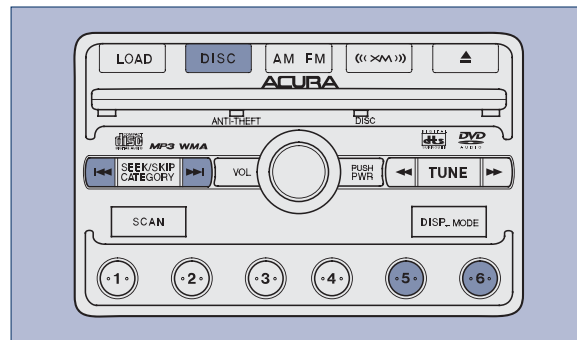

(RL shown)

Using Acura Music Link Without Acura TTS (Continued)


[▲ Table of Contents](#)

Using the Audio System Controls

Acura Music Link allows you to use the buttons on your audio system to control iPod functions. There are two ways* to listen to music: You can *shuffle all albums* or *shuffle all songs*. Selecting disc number 5 on your audio system corresponds to the *shuffle all albums* play mode, while selecting disc number 6 corresponds to the *shuffle all songs* play mode.

- To select Acura Music Link, press the CD, CD/AUX, CD/AUX/XM, CD/DVD, CD/CHG, DISC, DISC/TAPE, or DISC/AUX button (depending on your Acura model).
- To select a play mode, use the DISC– and DISC+ buttons (Preset 5 and Preset 6, respectively) or the CH DISC (▲ and ▼) buttons to scroll thru the disc numbers. When the desired disc number is shown in the audio display, press and hold either SEEK/SKIP button (◀◀/– or ▶▶/+ for at least 1 full second (or, on some models, until you hear a beep).

Audio System Controls

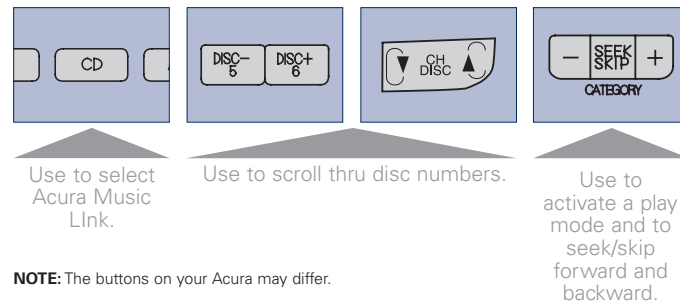

NOTE: The buttons on your Acura may differ.

NOTES:

- Depending on the model, the steering wheel audio controls may not operate or may have limited operation when using Acura Music Link.
- It is not necessary to eject any CDs in the CD player/changer to use Acura Music Link. Press the CD button (or appropriate button) repeatedly to toggle between the CD player/changer and Acura Music Link.

* See [page 10](#) to learn how to use additional play modes/categories.

Using Acura Music Link Without Acura TTS (Continued)

[▲ Table of Contents](#)

Playing Music

1. Connect the iPod (see [page 6](#)), turn the ignition switch to the ON (II) or ACC (I) position, and turn on the audio system.
2. Select Acura Music Link (see [page 8](#)). If the audio system plays the XM radio or a disc in the CD player/changer, press the CD button (or the appropriate button) again. Acura Music Link begins playback with the last song played on the iPod. If no song is queued, Acura Music Link shuffles all songs in random order.

Selecting a Play Mode

- *To shuffle the albums* on your iPod in random order, scroll to **Disc 5**, then press and hold either SEEK/SKIP button (⏮/– or ⏭/+) for at least 1 full second (or, on some models, until you hear a beep).
 - Press and release the SEEK/SKIP button to skip to the next song (⏭/+) or to the beginning of the song currently playing (⏮/–) within an album.
 - Press and hold either SEEK/SKIP button (⏮/– or ⏭/+) for at least 1 full second (or, on some models, until you hear a beep) to skip to the beginning of another album.

Pressing and holding the SEEK/SKIP (⏮/–) button will not skip to the previously played album. Acura Music Link continues to shuffle albums in random order whether you press and hold the forward (⏭/+) or backward (⏮/–) SEEK/SKIP button.

In *shuffle albums* mode (Disc 5), Acura Music Link only plays songs that have album information entered in the info tags. If none of the songs on an iPod have album information, all of the songs are treated as one album. See Info Tags on [page 10](#) for more information.

- *To shuffle all songs* in random order, scroll to **Disc 6**, then press and hold either SEEK/SKIP button (⏮/– or ⏭/+) for at least 1 full second (or, on some models, until you hear a beep). After selecting Disc 6, press and release the SEEK/SKIP button to skip to the next song (⏭/+) or to the beginning of the song currently playing (⏮/–).


See the [Tips](#) section of this user's guide for more information.

Using Acura Music Link With Acura TTS

To get the most out of Acura Music Link, first install the Acura TTS software application provided on the Acura Music Link CD-ROM. This optional software installs on the Mac or PC you use with your iPod. It creates voice prompts to help you find music on your iPod, and it allows you to shuffle songs, shuffle albums, seek/skip to the next song/album or previous song/album, and search playlists, albums, artists, and genres.

Acura TTS

Acura TTS is a software application that creates text-to-speech (TTS) files based on the information tags attached to each song on your iPod. Once installed on your computer, Acura TTS automatically launches every time you connect your iPod to your computer. It scans the music on your iPod, and creates TTS files that contain all of the voice prompts Acura Music Link needs to help you search for music.

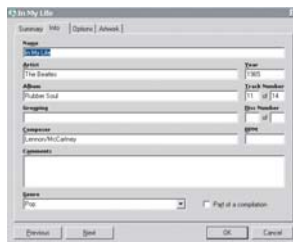


Info Tags Screen in iTunes

Info Tags

Each song on your iPod and in iTunes has a set of "info tags" attached to it, like Name, Artist, Album, Year, etc. (below left). You can edit these info tags by:

- Clicking on the desired song in iTunes
- Going to File, then Get Info
- Clicking on the Info tab

Acura TTS scans the information contained in the Artist, Album, and Genre info tag fields. It also scans the names of the playlists on your iPod. It then creates TTS files for the first letter of every artist, album, genre, and playlist, as well as TTS files for the names of every artist, album, genre, and playlist on your iPod. The TTS files are saved in your iTunes library and as playlists on your iPod and in iTunes. Each TTS playlist begins with "ZZZTTS" (right).

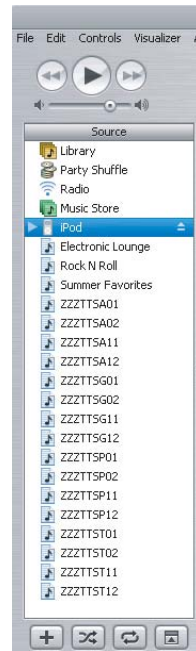

TTS Files/Playlists in iTunes

Before Installing Acura TTS

Before you install Acura TTS on your computer, make sure you:

- Install iTunes 6.0.4 or later (available for download at www.apple.com).
- Set your iPod to synchronize manually. (Go to Edit/Preferences, click on the iPod tab and select "Manually manage songs and playlists.")
- Disconnect your iPod from your computer.
- Adjust the text-to-speech settings on your Mac or PC to your preference. (See [page 13](#).)
- Close all other applications.

Installing Acura TTS

Mac: Double-click on the Acura TTS.pkg icon in the Mac Install folder, and follow the installation prompts.

PC: Double-click on the Setup.exe icon in the Windows Install folder, and follow the installation prompts.

Uninstalling Acura TTS

To uninstall Acura TTS on a **Mac**:

1. Go to System Preference/Login Items.
2. Delete Acura Helper.
3. Reboot.

To uninstall Acura TTS on a **PC**:

1. Go to Start/Settings/Control Panel.
2. Double-click on Add/Remove Programs.
3. Select the Acura TTS folder.
4. Click on the Remove button, and follow the uninstall prompts.

NOTE: Uninstalling Acura TTS does not remove any TTS files in iTunes or on your iPod. Delete those files (TTS playlists and TTS files in the iTunes library) manually.

Running Acura TTS

Once installed, Acura TTS automatically launches every time you connect your iPod to your computer. To run Acura TTS, connect your iPod to your computer. To update (and create TTS files) for the music on your iPod, click the OK button on the Acura TTS update screen. To manually run Acura TTS, launch the program from the applications folder (Mac) or Start Menu (PC).


The time needed to run Acura TTS depends on the number of songs and playlists in your music library. Allow about 10–15 minutes or more per 1,000 files. After the initial run, the time to run Acura TTS should decrease, as long as the TTS files from the previous update remain in iTunes.

If you make any changes to the music on your iPod (add songs, delete songs, create new playlists, edit album names, etc.), make sure you run Acura TTS.

If, upon connecting your iPod, you have not made any changes to the music on the iPod, click the Cancel button on the Acura TTS update screen.

NOTE: If, after connecting your iPod and launching Acura TTS, you receive a message that an iPod must be connected to run Acura TTS, simply launch Acura TTS from the applications folder (Mac) or Start menu (PC). Acura TTS should now recognize your iPod.

See the [Tips section](#) of this user's guide for more information.

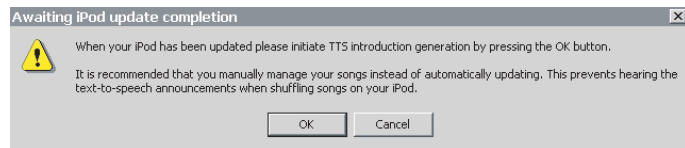

Acura TTS Update Screen

Text-To-Speech Settings

You can change and adjust the text-to-speech settings for TTS files (voice prompts) that Acura TTS creates. Modifying the system voice and the voice speed may help improve intelligibility.

Mac

1. Go to Finder/System Preferences.
2. Select the Speech icon.
3. Click on the Text To Speech tab.
4. Select the system voice of your preference from the pull-down menu.
5. Adjust and play the speaking rate.


NOTE: After changing and adjusting the text-to-speech settings, delete all TTS playlists and files in iTunes and on your iPod, then run Acura TTS.



Text to Speech (Mac)

PC

1. Open the Control Panel from the Start menu.
2. Select Speech or Sounds, Speech, and Audio.
3. Click on the Text To Speech tab.
4. Select the voice selection of your preference from the pull-down menu. (Either Microsoft Mary or LH Michelle* is recommended, if available.)
5. Adjust and preview the voice speed.

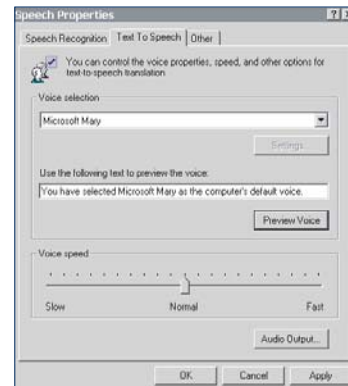

Text to Speech (PC)


NOTE: After changing and adjusting the text-to-speech settings, delete all TTS playlists and files in iTunes and on your iPod, then run Acura TTS.

* To download LH Michelle, visit <http://www.microsoft.com/msagent/downloads/user.asp>. Click on the "Text-to-speech engines" link, and select "Lernout & Hauspie® TruVoice TTS engine - American English (1 MB exe)" from the pull-down menu.

Connecting Your iPod

Make sure your iPod is in music mode (not photo mode). Then, find the Acura Music Link cable installed inside the glove box, and plug it into the dock connector port located on the bottom of the iPod. When the Acura Music Link cable is properly connected:

- A large check mark appears on the iPod screen. (See below.)
- You cannot operate the iPod using its controls (click wheel, etc). It can only be operated using your vehicle's audio system controls.
- Your vehicle charges the iPod battery when the ignition switch is in the ON (II) or ACC (I) position. It does not charge the iPod when the ignition switch is in the OFF (0) position.

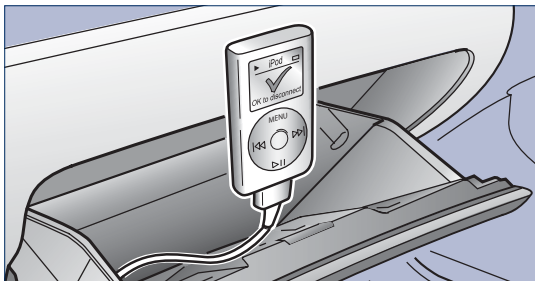

Disconnecting Your iPod


To disconnect the iPod, squeeze both sides of the Acura Music Link cable connector, and unplug the cable. You can connect and disconnect your iPod while the audio system is on or off.

IMPORTANT:


- For your safety, do not connect or disconnect the iPod while driving.
- Secure the iPod in the glove box. Do not place it on or allow it to fall onto the vehicle floor, where it can get stuck under the brake pedal or the accelerator pedal.
- Do not leave the iPod in the vehicle in high temperatures or expose it to extended periods of direct sunlight; doing so may damage it.
- To avoid damaging the Acura Music Link cable, do not pull strongly on the cable. Always keep the connector dry, and cap the connector when it is not in use.

Identifying Audio System Controls


Once your iPod is connected to Acura Music Link, use the audio system buttons (shown in blue) to play music. Note that Acura factory-installed audio systems vary from model to model. Your Acura may have slightly different button names for the same Acura Music Link functions.

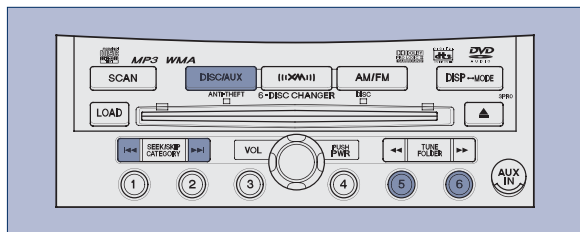


(RDX with Technology Package shown)

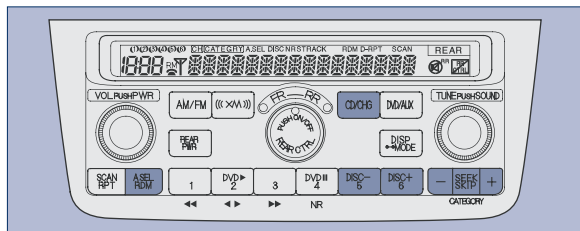

(MDX Touring with RES shown)

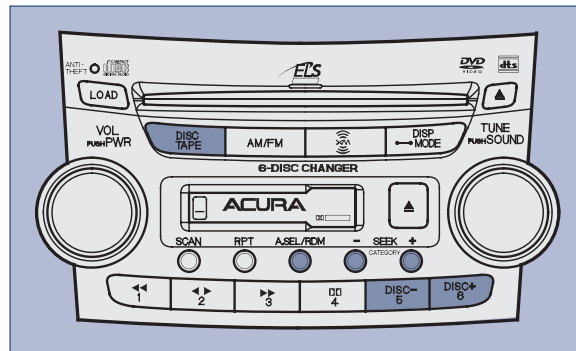

(TL with navigation system shown)

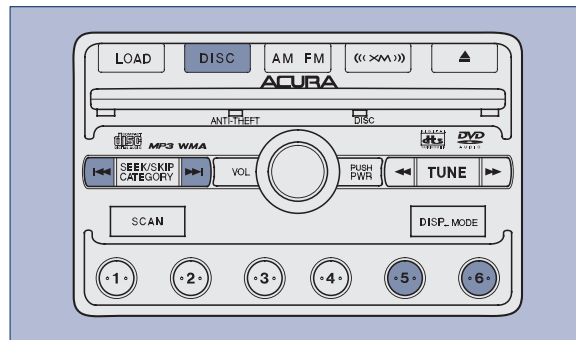


(RL shown)

Using the Audio System Controls

Acura Music Link allows you to use the buttons on your audio system to control iPod functions. There are six play modes/categories, or six ways to listen to music. Each disc number (1–6) corresponds with a play mode/category in Acura Music Link. For example, selecting disc number 1 on your audio system corresponds to the *search playlists* category in Acura Music Link.

- To select Acura Music Link, press the CD, CD/AUX, CD/AUX/XM, CD/DVD, CD/CHG, DISC, DISC/TAPE, or DISC/AUX button (depending on your Acura model).
- To select a play mode, use the DISC– and DISC+ buttons (Preset 5 and Preset 6, respectively) or the CH DISC (▲ and ▼) buttons to scroll thru the disc numbers. When the desired disc number is shown in the audio display, press and hold either SEEK/SKIP button (◀/– or ▶/+ for at least 1 full second (or, on some models, until you hear a beep).

Audio System Controls

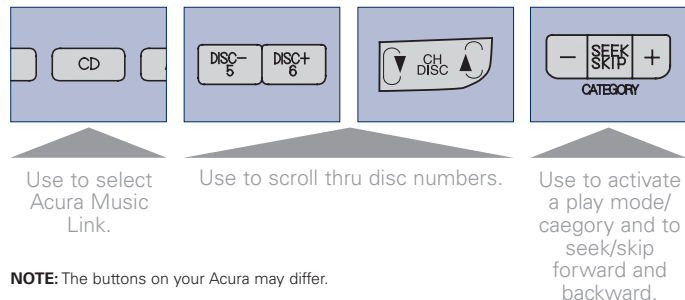

NOTE: The buttons on your Acura may differ.

NOTES:

- Depending on the model, the steering wheel audio controls may not operate or may have limited operation when using Acura Music Link.
- It is not necessary to eject any CDs in the CD player/changer to use Acura Music Link. Press the CD button (or appropriate button) repeatedly to toggle between the CD player/changer and Music Link.
- When Acura Music Link is cycling through the alphabet or announcing names, you cannot select another play mode/category. You can only select another play mode/category when Acura Music Link is playing a song.

Playing Music

1. Connect the iPod (see [page 14](#)), turn the ignition switch to the ON (II) or ACC (I) position, and turn on the audio system.
2. Select Acura Music Link (see [page 16](#)). If the audio system plays the XM radio or a disc in the CD player/changer, press the CD button (or the appropriate button) again.

Selecting a Play Mode/Category

- *To search playlists*, scroll to **Disc 1**, then press and hold either SEEK/SKIP button (◀/– or ▶/+) for at least 1 full second (or, on some models, until you hear a beep). Music Link announces the first letter of each playlist.
 - Press and release the SEEK/SKIP (▶/+) button immediately after hearing the desired letter. Acura Music Link begins playing the first song of the first playlist that begins with the selected letter.
- OR -
- To hear the names of the playlists that begin with a desired letter, press and release the SEEK/SKIP (▶/+) button immediately after hearing the letter, then press and hold either SEEK/SKIP button (◀/– or ▶/+) for at least 1 full second (or, on some models, until you hear a beep).

- Press and release the SEEK/SKIP (▶/+) button immediately after hearing the desired playlist name. Acura Music Link begins playing the first song in the selected playlist.
- *To search artists*, scroll to **Disc 2**, then press and hold either SEEK/SKIP button (◀/– or ▶/+) for at least 1 full second (or, on some models, until you hear a beep). Music Link announces the first letter of each artist.
 - Press and release the SEEK/SKIP (▶/+) button immediately after hearing the desired letter. Acura Music Link begins playing the first song of the first artist that begins with the selected letter.
- OR -
- To hear the artist names that begin with a desired letter, press and release the SEEK/SKIP (▶/+) button immediately after hearing the letter, then press and hold either SEEK/SKIP button (◀/– or ▶/+) for at least 1 full second (or, on some models, until you hear a beep).
- Press and release the SEEK/SKIP (▶/+) button immediately after hearing the desired artist's name. Acura Music Link begins playing the first song by the selected artist.

Selecting a Play Mode/Category (Cont.)

- *To search albums*, scroll to **Disc 3**, then press and hold either SEEK/SKIP button (◀/– or ▶/+) for at least 1 full second (or, on some models, until you hear a beep). Acura Music Link announces the first letter of each album.

– Press and release the SEEK/SKIP (▶/+) button immediately after hearing the desired letter. Acura Music Link begins playing the first song of the first album that begins with the selected letter.

- OR -

- To hear the names of the albums that begin with a desired letter, press and release the SEEK/SKIP (▶/+) button immediately after hearing the letter, then press and hold either SEEK/SKIP button (◀/– or ▶/+) for at least 1 full second (or, on some models, until you hear a beep).
- Press and release the SEEK/SKIP (▶/+) button immediately after hearing the desired album name. Acura Music Link begins playing the first song in the selected album.

- *To search genre*, scroll to **Disc 4**, then press and hold either SEEK/SKIP button (◀/– or ▶/+) for at least 1 full second (or, on some models, until you hear a beep). Acura Music Link announces the first letter of each genre.

– Press and release the SEEK/SKIP (▶/+) button immediately after hearing the desired letter. Acura Music Link begins playing the first song of the first genre that begins with the selected letter.

- OR -

- To hear the names of the genres that begin with a desired letter, press and release the SEEK/SKIP (▶/+) button immediately after hearing the letter, then press and hold either SEEK/SKIP button (◀/– or ▶/+) for at least 1 full second (or, on some models, until you hear a beep).
- Press and release the SEEK/SKIP (▶/+) button immediately after hearing the desired genre name. Acura Music Link begins playing the first song in the selected genre.

Selecting a Play Mode/Category (Cont.)

- To *shuffle the albums* on your iPod in random order, scroll to **Disc 5**, then press and hold either SEEK/SKIP button (⏮/- or ⏭/+) for at least 1 full second (or, on some models, until you hear a beep).
 - Press and release the SEEK/SKIP button to skip to the next song (⏭/+) or to the beginning of the song currently playing (⏮/-) within an album.
 - Press and hold either SEEK/SKIP button (⏮/- or ⏭/+) for at least 1 full second (or, on some models, until you hear a beep) to skip to the beginning of another album.

Pressing and holding the SEEK/SKIP (⏮/-) button will not skip to the previously played album. Acura Music Link continues to shuffle albums in random order whether you press and hold the forward (⏭/+) or backward (⏮/-) SEEK/SKIP button.

In *shuffle albums* mode (Disc 5), Acura Music Link only plays songs that have album information entered in the info tags. If none of the songs on an iPod have album information, all of the songs are treated as one album.

- To *shuffle all songs* in random order, scroll to **Disc 6**, then press and hold either SEEK/SKIP button (⏮/- or ⏭/+) for at least 1 full second (or, on some models, until you hear a beep). After selecting Disc 6, press and release the SEEK/SKIP button to skip to the next song (⏭/+) or to the beginning of the song currently playing (⏮/-).

Audio System Controls

- **A.SEL/RDM (Random) Button** (*on applicable models*): Press the A.SEL/RDM (Random) button on the audio system to shuffle all songs within the selected category/play mode. For example, if you select and play a playlist (Disc 1) and then press the A.SEL/RDM button, Acura Music Link will shuffle all songs within that playlist in random order.
NOTE: The A.SEL/RDM button does not work while Music Link is in the *shuffle all songs* (Disc 6) play mode.
- After pushing the appropriate button to activate a play mode or category search, **it may take up to 10 seconds for Acura Music Link to announce** the alphabet or names associated with that mode or search.
- **Selecting a Disc Number:** Unlike using a CD changer, when using Acura Music Link, the preset buttons (1–6) on your vehicle's audio system do not *directly* correspond to Music Link's play modes and category searches (Disc 1–6). To scroll thru the disc numbers (play modes/category searches), use only the DISC– (Preset 5) and DISC+ (Preset 6) buttons or the CH DISC (▲ and ▼) buttons, then press and hold either SEEK/SKIP button (◀◀ or ▶▶) for at least 1 full second.

Display Info

Acura Music Link does not display iPod information (like song titles or artist names) on the audio system display.

Tag Info

- **Song Titles:** Acura Music Link does not search the music on an iPod by song name; it only searches music by artist, album, genre, and playlist name.
- **Acura Music Link does not recognize punctuation** (commas, periods, question marks, dashes, slashes, ampersands, etc.). It also does not recognize special characters and accents (à, é, ì, ô, etc.). If punctuation or special characters/accents are used in the artist, album, genre, or playlist name, Acura Music Link will announce it on your audio system as "punctuation" or "not speakable."
- **Make sure there are no spaces** before the first letter or number in the names of your playlists, artists, albums, and genres.
- **Keep your music organized** with correctly spelled info tags (artist, album, and genre).
- **Do not keep empty playlists.**

iTunes Settings

- **For best results, set your iPod to synchronize manually.** (Go to Edit, then Preferences, click on the iPod tab and select "Manually manage songs and playlists.") If you select "Automatically update all songs and playlists," you may hear voice prompts when you shuffle songs on your iPod. If you select "Automatically update selected playlists only," make sure you check all of the playlists that begin with ZZZTTS; otherwise running Acura TTS will not update all of the music on your iPod.
- **Check the "Connect to Internet when needed" check box in the iTunes preferences.** (Go to Edit, then Preferences, and click on the General tab.) With this feature, when you load a store-bought music CD on your computer, iTunes automatically looks up and fills in the info tags for every song on the disc. This feature not only helps you organize your music accurately, it also saves time.
- **Do not name your playlists "Podcasts."** Doing so may cause undesirable effects during searches because iPod uses this name for podcasting.
- **Keeping the TTS files (playlists that begin with ZZZTTS) in iTunes makes Acura TTS updates quicker.** If you delete these files, Acura TTS will need to regenerate them the next time it runs. However, with the TTS files in iTunes, Acura TTS only needs to generate TTS files for any new music on your iPod.

For more information about Acura Music Link and Acura TTS, including FAQs, go online to <http://musiclink.acura.com>. For additional support, call Acura Client Services at 1-800-382-2238, Monday thru Friday, 6 a.m. to 5 p.m. (PST)

Acura TTS Software Updates

Visit <http://musiclink.acura.com> to download the most recent Acura TTS software and software updates.

©2006 American Honda Motor Co., Inc. – All Rights Reserved.

American Honda accepts no responsibility for any lost data on an iPod, even if the data is lost while using this product.

Apple, the Apple logo, iPod, iPod, iTunes, FireWire, and Mac are trademarks of Apple Computer, Inc., registered in the U.S. and other countries.